

lockup-mate[®] **PLUS+**

TOYOTA LANDCRUISER 200, PRADO 150



SUNVISOR QUICK REFERENCE CARD

CONFIGURATION MODE

Engine OFF, Ignition ON, place into **SPORT mode**, and press **LED/Switch**

#	PARAMETER	SETTING
1	LOCKUP SENSITIVITY*	RANGE 0-9 DEFAULTS (4H=4, 4L=1)
2	WARMUP TEMP	RANGE 2-9 (20°C-90°C) DEFAULT 3 (30°C)
3	MINIMUM LOCKUP GEAR	RANGE 1-5 (1 ST -5 TH) DEFAULT 2ND
4	EXCESSIVE TCC SLIP WARNING	0=OFF 1= SPORT 2=DRIVE & SPORT
5	PULSE LED DURING WARMUP	0=OFF 1= ON PULSE THE LED

**4H and 4L can be individually set. Engage 4H or 4L before entering configuration mode*

LED/SWITCH COMMANDS (TOGGLES)

ON/OFF	PRESS LED/Switch
BRIGHT LED	PRESS & HOLD 5 SECS
PROTECTION	PRESS & HOLD 10 SECS
MODE	(ENGINE OFF ONLY)
RESET CEL 	DOUBLE CLICK LED/SWITCH



SELF DIAGNOSTIC MODE

Engine OFF, Ignition ON, **SPORT mode**, and press and hold **LED/Switch 5 secs**
(all parameters 1-6 = ~42KPH)

SUNVISOR QUICK REFERENCE CARD