

PRODUCT NOTICE

OBD2 Reader Compatibility & Setup

Last updated 26/03/2023



Full compatibility – no setup required

- **Toyotas 2007-2015**
- **Mitsubishi Challenger 2009-2015**
- **Mitsubishi Pajero 2007+**
- **Mitsubishi Triton MQ 2016-2018**
- **Mitsubishi Triton MN (5 speed) 2009-2015**

Models with some incompatibility requiring extra setup

- **Toyotas 2015+**
- **Mitsubishi Triton MN (4 speed only)**

Explanation:

The advanced features of MM4X4 lockup kits rely on the digital interface into the vehicle via the OBD2 connection.

One of our design goals is to ensure you are still able to use 3rd party OBD2 devices in conjunction with the lockup kit. Both the lockup kit and the OBD2 device must share the digital interface, a purpose for which the OBD2 protocol was not designed.

Our kits normally achieve this by avoiding the OBD2 protocol and relying on the CANBUS broadcasted messages for data from the ECUs. In some models our kits use complex multiplexing of OBD2 data request to share the OBD2 interface.

The affected vehicles above, however, do not broadcast all the parameters required by the lockup kit, thus some OBD2 messages must be used to obtain vehicle status.

This can cause a conflict with some ELM327 / smartphone apps.

Action Required:

In these affected models, when performing diagnostics using your OBD2 reader, you will need to switch the lockup kit OFF using the LED/Switch to cease all OBD2 communication activity by the kit, leaving the digital interface exclusively for the use of the OBD2 reader.

Compatible OBD2 Devices & Apps*:

- **UltraGauge MX (This is our recommended device)**
- **UltraGauge Blue**
- **ScanGauge2** (you must switch OFF lockup-mate® PLUS+ before using for diagnostics)
- **ScanGauge3** (you must switch OFF lockup-mate® PLUS+ before using for diagnostics)
- **ELM327 adapter (Bluetooth 4.0 and WiFi)**

Compatible Apps for use with ELM327 devices:

- **Car Scanner** (Android and iPhone)
- **Dash Command** (iPhone with WiFi)
- **UltraGauge Blue** (Android and iPhone)

The following do not to work:

- **TorquePro (Car Scanner is a recommended alternative)**
- **Auto Doctor**

Let us know if your app isn't listed and we will assess it.

Action Required:

For compatible devices you should increase the refresh rate.

INSTRUCTIONS: Increasing the Refresh Rate

Because the lockup kit synchronises with the OBD2 Reader, a **fast** refresh rate is recommended.


* The refresh rate for the OBD2 reader should be set to the maximum setting as follows:

- **UltraGauge** Menu->
 → Gauge/Page Menu . .
 → Select Gauge/Page . .
 → Page settings . .
 → Page Refresh Time
 Page Refresh Time **0.3** Seconds
- **Car Scanner** Settings->Connection Advanced Settings ->
 OPTION Delay before sending data to ELM (ms) 40
 OPTION Ping ECU when idle OFF (unticked)
- **ScanGauge^{II}**

Accessing the Advanced Setup Options

The Advanced Setup Options are located within the SETUP menu. To access the Advanced Setup Options screens, press the lower right function button next to MORE on the Home Screen. Next press the lower left function button next to SETUP.

Once on the Setup Screen, use the upper left or right function buttons to cycle through the available screens until the screen displays ADV SETTINGS. Press the lower right function button next to EDIT to enter the Advanced Setup Options.

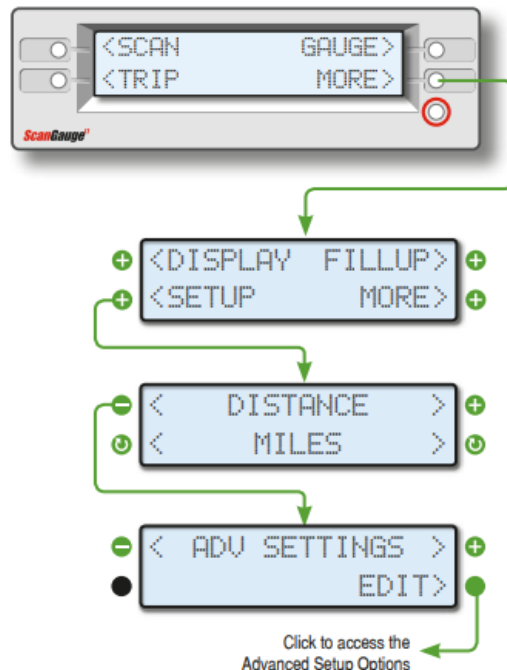


Set to 'Fast'

Setup Parameter	Display	Options	Description
Data Update Rate	UPDATE RATE	Slow Normal Fast	Sets the rate in which ScanGauge reports data. See below.
Speed Adjustment	SPEED	-100%-100%	Sets the speed offset to compensate for inaccurate speed readings. See page 15 and 16.
Fuel Cutoff Setting	CUTOFF	0-99 (Default: 24)	Sets the fuel cutoff level. See page 16.
Parameter Identification Descriptor method	PIDS	ALL Supported	Sets the PID method. See page 16.
Liters per Hundred Kilometers	LHK	OFF ON (Default)	Displays fuel economy in Liters per Hundred Kilometers. See page 17.
Diagnostic Trouble Codes Clear Method	DTC	Normal ALT	See page 17.
Sleep Event	SLEEP EVENT	0 RPM (Default) NO COMM	Sets the ScanGauge power down event. See page 17.
Manifold Pressure Method	MAP OR BOOST	MAP (Default) BST	Allows you to set how Manifold Pressure is calculated. See page 17.
Horsepower Adjustment	HP	-99% - +99% (Default 0)	Sets the HP offset to compensate for in-accurate Horsepower readings. See page 17.

- ScanGauge^{III}



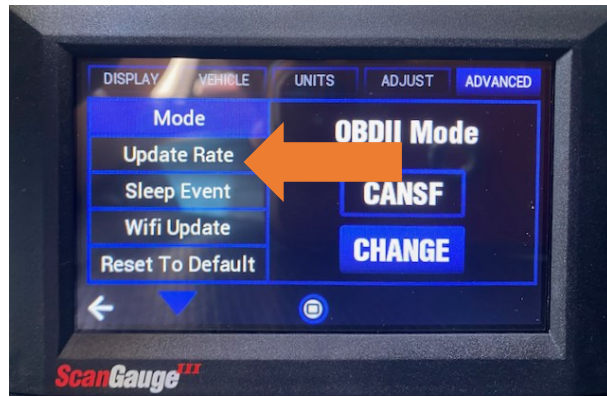

End