

**MM4X4**  
VEHICLE ELECTRONICS  
mm4x4.com.au

**auto-mate** **PRO**

**MITSUBISHI**

**PAJERO NT, NW, NX 3.2L DiD (2009+)**

**OPERATION BOOKLET**

SCAN QR CODE



**TROUBLESHOOTING**

SCAN QR CODE



**SELF DIAGNOSTIC MODE**

**Engine OFF, Ignition ON**, and then press and hold **CRUISE**

(P1-6 = approx. 80, 80, 100, 20, 25, 50)

**SUNVISOR QUICK REFERENCE CARD**


## CONFIGURATION MODE

**Engine OFF, Ignition ON**, Press Cruise ON/OFF for 5 sec  
*(Or press and hold COAST/SET for 5 seconds to reset to factory defaults)*  
*(Tap LED/Switch to toggle setting of Memory 1 or 2 setting (gear = current memory #))*

| #  | PARAMETER             | VALUE   |
|----|-----------------------|---|
| P1 | GEAR SHIFT ADJUSTMENT | RANGE 60-160  |
| P2 | LOCKUP SENSITIVITY    | RANGE 60-160 (can't be between P1 to P1+15)                                     |
| P3 | ACTIVATION GEAR       | RANGE 10-50 = 1 <sup>ST</sup> -5 <sup>TH</sup>                                  |
| P4 | ENGINE BRAKING        | 10=OFF, 20=MEDIUM (will upshift), 30=FULL                                       |
| P5 | ACTIVATION TEMP.      | 20-100 = 20-100°C (LED pulses on warmup)<br>120-200 = 20-100°C (No LED pulsing) |
| P6 | LED BRIGHTNESS*       | RANGE 0-100 (%) <b>DEFAULT (DAY 80, NIGHT 3)</b>                                |

\*Day-time and Night-time can be individually set. Use Headlight switch to select.

## DRIVING MODE

|                    |  |
|--------------------|--|
| PRESS LED/SWITCH   | Turn ON / OFF  |
| HOLD CRUISE CANCEL | Toggle 'BRIGHT LED' when headlights are on   |
| DOUBLE CLICK LED   | Toggle 5th gear lockout, or in PARK, reset CEL  |
| TRIPLE CLICK LED   | Toggle Memory 1, 2   |



Rev B

# SUNVISOR QUICK REFERENCE CARD